

Response™

Wireless Remote Control Installation and Operating Instructions

These instructions should be read in conjunction with your System Installation and Operating Manual and be retained for future reference.

DECLARATION

Novar ED&S hereby declares that this wireless Remote Control is in compliance with the essential requirements and other relevant provisions of the R&TTE directive (1999/5/EC).

INTRODUCTION

These Remote Control units are designed for use with Response Wireless Intruder Alarm systems operating at 868MHz only.

The Remote Control Unit is used to Arm and Disarm the system.



The Remote Control Unit also incorporates a Personal Attack (PA) switch. Activating the PA switch on the side of the Remote Control will immediately trigger an Alarm (unless the system is in Service, Test or Program mode) even if the system is disarmed. The alarm can be cancelled by pressing the 'DISARM' button on the Remote Control or at the Control Panel.

Up to 6 Remote Control Units and/or Remote Keypads can be used with your system, providing they are all operated within the working range specified by the Installation and Operating manual of your alarm system.

The Remote Control is powered by a CR2032 type Lithium cell which under normal conditions will have an expected life of approximately 1 year. Under normal battery conditions the Transmit LED on the Remote Control will only illuminate when a button is pressed. However, under low-battery conditions this LED will continue to flash after the button has been released. When this occurs the battery should be replaced as soon as possible.

CONFIGURING THE REMOTE CONTROL

1. Remove the rear cover by undoing the small screw on the rear of the Remote Control and keeping it safe for later.
2. Insert the battery under the clip ensuring that the + terminal faces upwards away from the Circuit Board.
3. Replace the rear cover and fixing screw. Do not over tighten the screw as this could damage the thread.

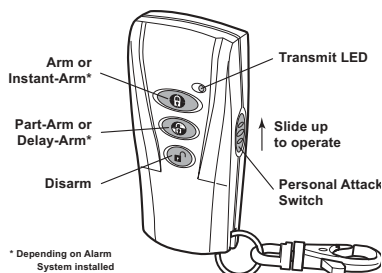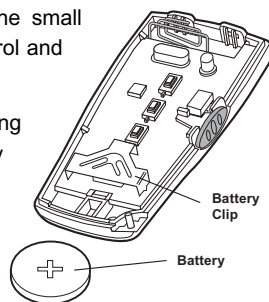

Linking the Remote Control to the Alarm System:

Ensure that the Control Panel is in Programming/Learn Mode or for single zone systems, that the siren is in Service Mode prior to Learn Mode (Refer to the 'Installation and Operating Manual').

TESTING THE REMOTE CONTROL

Return the system to Standby/Operating Mode.

The operation of the Remote Control should be tested with the system in normal operating mode to ensure that the new Remote Control will successfully communicate with the system and the Arm and Disarm functions operate correctly. Also check that activating the Personal Attack switch on the Remote initiates an alarm condition.

Refer to your System Installation and Operating Manual for further details on operating and testing the system.

DISPOSAL AND RECYCLING

Batteries and waste electrical products should not be disposed of with household waste. Please recycle where these facilities exist. Check with your local authority or retailer for recycling advice.



GUARANTEE

Novar ED&S undertakes to replace or repair at its discretion goods (excluding non rechargeable batteries) should they become defective within 1 year solely as a result of faulty materials and workmanship.

Understandably if the product has not been installed, operated or maintained in accordance with the instructions, has not been used appropriately or if any attempt has been made to rectify, dismantle or alter the product in any way the guarantee will be invalidated.

The guarantee states Novar ED&S entire liability. It does not extend to cover consequential loss or damage or installation costs arising from the defective product. This guarantee does not in any way affect the statutory or other rights of a consumer and applies to products installed within UK and Eire only.

If an item develops a fault, the product must be returned to the point of sale with:

1. Proof of purchase.
2. A full description of the fault.
3. All relevant batteries (disconnected).

Response is a trademark of Novar ED&S.

CUSTOMER HELPLINE

Most issues can be solved over the phone in a few minutes.

Please contact our Helpline Team on the number below for any installation and general advice regarding our products:

0844 736 9149

Lines open 9.00am to 5.00pm, Monday to Friday.
Calls charged at service providers national rate.



Novar Electrical Devices and Systems Limited. (A Honeywell Company)

The Arnold Centre, Paycocke Road, Basildon, Essex SS14 3EA. UK

www.friedland.co.uk

50042383Rev.A