

# D500

## Décor Symphony Chime

**Instructions** – Please retain these instructions for future reference

**Pack contents:**

- Door Chime (Base & decorative cover)
- Bell push & CR2032 Lithium coin cell battery
- Two screws (ø4x32mm), 2 x wall plugs (ø6x30mm) for mounting the Door Chime.
- Adhesive pad, 2 x screws (ø3x20mm) 2 x wall plugs (ø5x25mm) for mounting the bell push

**You will require:**



- A small crosshead and flathead screwdriver.
  - ø5 and ø6 masonry drills.
  - 4 X LR14 (C) Alkaline batteries for the Door Chime.
- Only long-life Alkaline batteries must be used.*

**Installation**

**Please note:** The stated range of this product is measured in open field conditions. Walls, ceilings and the positioning the bell push or door chime on or near metal structures or reinforced PVC doors or doorframes will reduce the transmission range.

**1. Open the bell push**



To open the front cover carefully insert a flat bladed screw driver, into the slot and twist gently (A). When refitting the front cover to ensure the weather proofing is maintained, always mount the bell push in the upright position and replace the cover securely. Fig 1

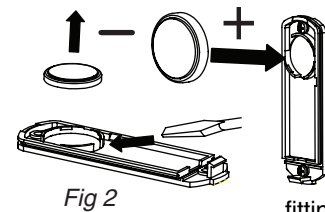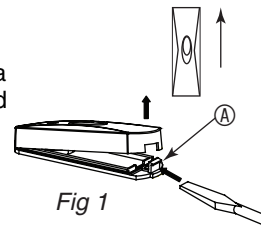

**2. To fit or replace the battery**  
Open the front cover and insert the CR 2032 Lithium coin cell battery into the base as shown in Fig. 2. Any debris created during installation must be removed from the base before fitting battery, to ensure good contact.

**3. Mount the bell push**


Ensure the wall surface is clean and dry. Mount using either the double sided sticky pad on a smooth surface, or the screws and wall plugs provided, See Fig 3. Do not mount the push on or near (< 30cm) large metal objects, as it will block signals from the push.

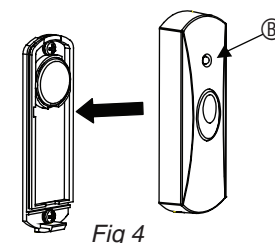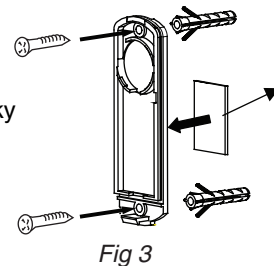


**4. Test the bell push**  
When the bell push button is pressed, the confidence light (B) in Fig 4, will illuminate to reassure the caller that the bell push is working. The light will flash 5 times when the battery needs replacing.

**5. Fitting the door-chime**

The door chime mounting height should be around 2 m (6 ft) from the ground as shown in Fig 5. Follow the TOP arrow as shown in Fig 6. Remove the decorative cover by simply pulling it away from the rear casing.

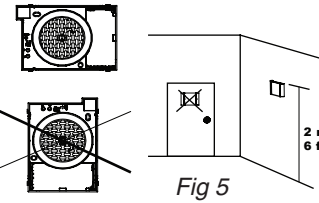

The chime base should be wall mounted using the screws and wall plugs provided (refer to Fig 6 for mounting information). Insert the LR14 (C) alkaline batteries in the order shown in Fig 9.

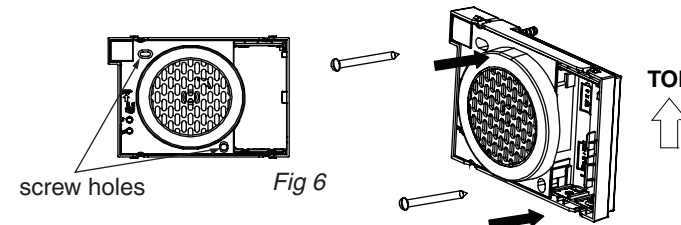

**6. Programming of bell push transmitter(s)**

The first time the chime is powered up, the sounds available are demonstrated. First make sure that the door push and the chime are separated by at least 1m (3 ft). Press the main door push until the chime responds with a tune.

You can leave this tune or change it to a desired tune by pressing button A (see Sound Selection). To program a second push, press the push until the chime sounds. Use button B to change the tune if required. Programming is now completed.

If more than 5 minutes has elapsed, you will have to reset the chime programming by pressing and holding button A and B until the chime sounds, this takes approximately 5 seconds. The chime can then be programmed to the door push.

The chime will operate with up to two pushes. All EVO and Décor chimes and bell pushes use this self-learning feature to ensure no interaction from other neighbouring systems.

**7. Sound Selection**

- A = Main push sound selection
- B = Second push sound selection


Tunes options are as follows:

**Symphony Sound Variety:**

1. Big Ben 8 Note (Default Tune for 1st Push)
2. Big Ben 4 Note
3. Big Ben 2 Note (Default Tune for 2nd Push)
4. Big Ben 1 Note
5. Mini Bell 2 Note
6. Mini Bell 4 Note w / Echo
7. Altosax



**8. Volume adjustment**

The Volume adjustment knob (C in Fig 7) enables you to adjust the volume of your door chime at any time.

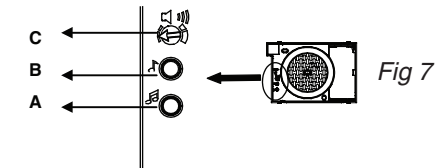

**9. Refit chime cover**

After the automatic programming, sound selection and volume adjustment is finished, press the decorative cover back onto the installed Chime Base as shown in Fig 8.

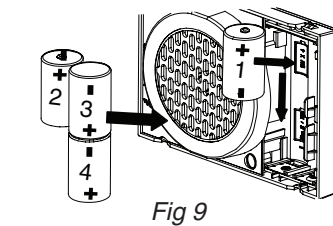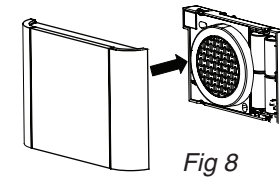

**10. Replacing Batteries**  
First remove decorative cover and replace with 4 x LR14 (C) alkaline batteries.(Fig 9) When replacing batteries the chime is still programmed and can be used straight away.

**Trouble Shooting**

**Chime not Sounding**

**Batteries may not be inserted correctly**  
Check all batteries have been inserted correctly

**Chime may be positioned out of range of the bell push**  
Move your chime closer to the bell push

**A metallic object may be blocking the signal from bell push position**  
Experiment with the location of the chime to see if you can move it in a more suitable place

**The battery in the bell push may need replacing**  
Press the bell push. If the confidence light (B) flashes 5 times after being pushed, replace the battery.  
**Note:** In cold conditions, poor location or environment, operating at maximum range it is advisable to replace the battery more frequently before the indicator light flashes (i.e every 12 - 18 months) to maintain optimum performance

**Your bell push and chime haven't been programmed**  
Reset the automatic programming of your chime and bell push

**Declaration**

Novar ED&S hereby declares that this wirefree product is in compliance with the essential requirements and other relevant provisions of the Radio and Telecommunications Terminal Equipment ( R & TTE ) directive, 1999/5/EC

Friedland guarantees this product for 3 years from date of purchase. Proof of purchase required, this does not affect your statutory rights. If you require further information about our products, call the Friedland helpline on 01268 563066. Friedland a Novar business, Novar ED&S, The Arnold Centre, Paycocke Road Basildon, Essex, SS14 3EA, England  
[www.friedland.co.uk](http://www.friedland.co.uk)