

PROBLEM	SOLUTION
<i>No picture can be viewed</i>	The power supply adaptor is not plugged in. The TV/VCR/DVR is not tuned to view the correct channel.
<i>Poor picture quality</i>	Clean the camera lens. Adjust the contrast/brightness on the TV.
<i>Some colours viewed by the camera do not appear to look like true colours</i>	The camera's lens is a CMOS type sensor. Its limitation is that it will not produce all colours viewed outside accurately.
<i>A white image appears at night</i>	The camera's infrared LEDs shine invisible light that reflects off surfaces such as glass causing white light. Place the camera on the other side of windows or place the lens of camera flush against the window to try to improve the night vision or place the camera in a well lit area.